


1/2" to 2" Union Sweat, Solder Joint Stem Up Open, Two-Way Valves General Instructions

Application

VB-7214 series single seat, stem up open, two-way valves control water from 20 to 281°F (-7 to 138°C) or steam to 281°F (138°C) maximum in heating or air conditioning systems. They are used for two-position or proportional control applications. Valve assemblies require an actuator and a valve linkage that must be purchased separately.



Danger: Do not use for combustible gas applications. The VB-7214 series valve packings are not rated for combustible gas applications, and if used in these applications, gas leaks and explosions could result.

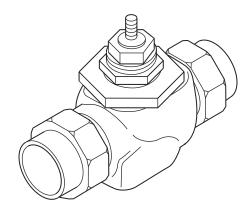

Features

- Valve sizes 1/2" to 2"
- 250 psig pressure rating per ANSI Standards (B16.15–1985) for screwed cast bronze bodies
- · Spring-loaded TFE packing
- Union sweat end connections

Applicable Literature

- Valve Products Catalog, F-27384
- Cross-Reference Guide, F-23638
- Reference Manual, F-21683
- Application Manual, F-21335
- Control Valve Sizing, F-13755
- Valve Selection Chart for Steam, F-11366
- Valve Selection Chart for Water, F-11080
- EN-205 Water System Guidelines, F-26080

SPECIFICATIONS

Table-1 Specifications/Models.

	Specifications	Valve Body Series VB-7214-0-4-P				
Service		Chilled or Hot Water and Steam				
Flow Characteris	stics (Figure-1)	Equal Percentage				
Action			Stem Up Open			
Sizes			1/2" to 2"			
Type of End Fitti	ng		Union Sweat, Solder Joint			
	Bod	ly	Bronze			
	Sea	t	Bronze			
Valve	Ster	m	Stainless Steel			
Materials	Plug	g	Brass			
	Pac	king	Spring-loaded TFE			
	Disc	c	EPDM			
ANSI Pressure C	lass (Figure-2)		250 (up to 400 psig below 150°F) ^a			
Maximum Inlet P	ressure, Steam		35 psig (241 kPa)			
Allowable Contro	ol Media Tempera	20 to 281°F (-7 to 138°C)				
Allowable Differe	ential Pressure fo	r Water ^b	35 psi (241 kPa) Max. for Normal Life (refer to "Cavitation Limitations on Valve Pressure Drop" on page 7)			
Allowable Differe	ential Pressure fo	r Steam ^b	20 psi (138 kPa)			
			20 psi (138 kPa)			
Valve Size	C _v Rating	k _{vs} Rating ^c	Complete Valve Body Part Number			
Valve Size	C _v Rating	•	' ' '			
		k _{vs} Rating ^c	Complete Valve Body Part Number			
Valve Size	0.4	k _{vs} Rating ^c 0.3	Complete Valve Body Part Number VB-7214-0-4-1			
	0.4	k _{vs} Rating ^c 0.3 1.1	Complete Valve Body Part Number VB-7214-0-4-1 VB-7214-0-4-2			
1/2"	0.4 1.3 2.2	0.3 1.1 1.9	Complete Valve Body Part Number VB-7214-0-4-1 VB-7214-0-4-2 VB-7214-0-4-3			
	0.4 1.3 2.2 4.4	0.3 1.1 1.9 3.8	VB-7214-0-4-1 VB-7214-0-4-2 VB-7214-0-4-3 VB-7214-0-4-4			
1/2" 3/4"	0.4 1.3 2.2 4.4 5.5	0.3 1.1 1.9 3.8 4.8	VB-7214-0-4-2 VB-7214-0-4-3 VB-7214-0-4-4 VB-7214-0-4-5			
1/2"	0.4 1.3 2.2 4.4 5.5 7.5	0.3 1.1 1.9 3.8 4.8 6.5	VB-7214-0-4-3 VB-7214-0-4-4 VB-7214-0-4-3 VB-7214-0-4-4 VB-7214-0-4-5 VB-7214-0-4-6			
1/2" 3/4"	0.4 1.3 2.2 4.4 5.5 7.5	k _{vs} Rating ^c 0.3 1.1 1.9 3.8 4.8 6.5 8.7	VB-7214-0-4-1 VB-7214-0-4-2 VB-7214-0-4-3 VB-7214-0-4-4 VB-7214-0-4-5 VB-7214-0-4-6 VB-7214-0-4-7			
1/2" 3/4" 1"	0.4 1.3 2.2 4.4 5.5 7.5 10	k _{vs} Rating ^c 0.3 1.1 1.9 3.8 4.8 6.5 8.7 12	Complete Valve Body Part Number VB-7214-0-4-1 VB-7214-0-4-2 VB-7214-0-4-3 VB-7214-0-4-4 VB-7214-0-4-5 VB-7214-0-4-6 VB-7214-0-4-7 VB-7214-0-4-8			

^a Do not apply above pressure rating to piping system.

Close-off Pressure Rating

The close-off pressure rating is dependent on the size of the valve, valve linkage, and actuator. Consult the **Valve ProductsCatalog**, **F-27384**, for close-off ratings.

b Maximum recommended differential pressure. Do not exceed recommended differential pressure (pressure drop) or integrity of parts may be affected. Exceeding maximum recommended differential pressure voids product warranty.

c $k_{vs} = m^3/h (\Delta P = 100 \text{ kPa})$ $C_v = k_{vs} \times 1.156$

Normal Position of Valve Assembly

For a valve assembly (valve, linkage, and actuator) to have a normal position, the actuator must be of the spring return type. See Table-2 for spring return position of valve assemblies.

Table-2 Required Compatible Actuators/Linkages.

Actuator Series	Required Valve Linkage	Normal Position		
MA-318, MA-418, MA-419	AV-391	N.O. or N.C.		
MA-5210, MA-5211, MA-5213	AV-7600 ^a	Normally Open		
MC-351, MC-431, MC-4311, MC5-4311	AV-393	None		
MF-5413, MF-5513	AV-7600 ^a	Normally Open		
MF-22203, MF-22303, MF-22323	Included w/Actuator	None		
MF-63103, MF-63123	included w/Actuator	None		
MK-2690	AV-7400			
MK-4601, MK-4611, MK-4621	AV-401	Normally Open		
MK-6601, MK-6611, MK-6621	AV-430			
MM-400, MMR-400	AV-630 or	None		
MM-500, MMR-500	AV-630-010	N.O. or N.C.		
MP-361, MP-367, MP-465, MP5-4651	AV-391	Normally Closed		
MP-371, MP-377, MP-475, MP5-4751	Av-391	Normally Open		
MP-381, MP-382, MP-387, MP-485, MP-486, MP-4851, MP5-4851	AV-393	None		
MP-5210, MP-5211, MP-5213	AV-7600 ^a			
MP-5410, MP-5411, MP-5413				
MP-5511, MP-5513	AV-7600 & AV-601	Normally Open		
MPR-5610, MPR-5611, MPR-5613	AV-7000 & AV-001			
MPR-5713				
MS-22353	Included w/Actuator	None		

a High ambient temperatures with high media temperatures in the valve may require the use of AV-601 in addition to AV-7600. See General Instructions for AV-7600 (F-26235) and AV-601 (F-19069) for details.

Flow Characteristics

All valves have modified equal percentage flow characteristics. That is, for equal increments of valve stem stroke, the change in flow rate with respect to valve stroke may be expressed as a constant percent of the flow rate at the time of the change. The change of flow rate with respect to valve stroke is relatively small when the valve plug is near the valve seat and relatively high when the valve plug is nearly wide open. See Figure-1 for typical modified equal percentage flow characteristics of VB-7214 series valve bodies.

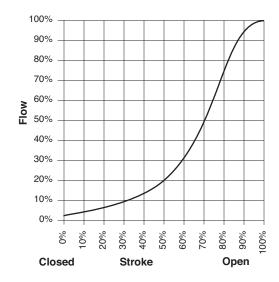


Figure-1 Typical Modified Equal Percentage Flow Characteristics.

Rangeability

Rangeability is the ratio of rated flow to the minimum controllable flow through a valve. Table-3 lists the rangeability for VB-7214 series valves.

Table-3 Rangeability.

Valve Body Part Number	Nominal Rangeability	Valve Body Part Number	Nominal Rangeability
VB-7214-0-4-1	5:1	VB-7214-0-4-7	60:1
VB-7214-0-4-2	15:1	VB-7214-0-4-8	75:1
VB-7214-0-4-3	25:1	VB-7214-0-4-9	75:1
VB-7214-0-4-4	40:1	VB-7214-0-4-10	75:1
VB-7214-0-4-5	50:1	VB-7214-0-4-11	75:1
VB-7214-0-4-6	60:1		

Temperature/Pressure Ratings of Valve

Caution: Do not apply at static pressures greater than the pressure rating of the piping system.

See Figure-2 for temperature and pressure ratings. Consult the appropriate valve linkage general instruction sheet for the effect of valve body ambient temperatures on specific actuators. Ratings conform with published values and disclaimer.

VB-7214-0-4-P (Union Sweat Cast Bronze Body)

Standards: Pressure to ANSI B16.15 Class 250 with 400 psig up to 150°F decreasing to

321 psig at 281°F

Materials: Bronze, ASTM B584

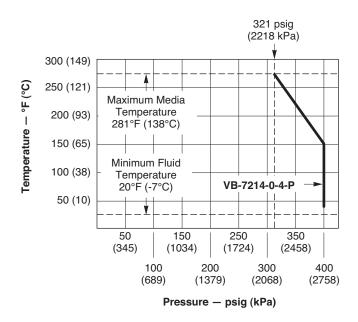


Figure-2 Temperature and Pressure Ratings for VB-7214 Series Valve Bodies.

VALVE SIZING AND SELECTION

Water

Two-position

Two-position control valves are normally selected "line size" to keep pressure drop at a minimum. If it is desirable to reduce the valve below line size, then 10% of "available pressure" (that is, the pump pressure differential available between supply and return mains with design flow at the valve location) is normally used to select the valve.

Proportional

Proportional control valves are usually selected to take a pressure drop equal to at least 50% of the "available pressure." As "available pressure" is often difficult to calculate, the normal procedure is to select the valve using a pressure drop at least equal to the drop in the coil or other load being controlled (except where small booster pumps are used) with a minimum recommended pressure drop of 5 psi (34 kPa). When the design temperature drop is less than 60°F (33°C) for conventional heating systems, higher pressure drops across the valve are needed for good results (Table-4).

Table-4 Conventional Heating System.

Design Temperature Load Drop °F (°C)	Recommended Pressure Drop ^a (% of Available Pressure)	Multiplier on Load Drop		
60 (33) or More	50%	1 x Load Drop		
40 (22)	66%	2 x Load Drop		
20 (11)	75%	3 x Load Drop		

^a Recommended minimum pressure drop = 5 psi (34 kPa).

Secondary Circuits with Small Booster Pumps: 50% of available pressure difference (equal to the drop through load, or 50% of booster pump head).

Water Capacity

See Table-5 for water capacity of VB-7214 series valves.

Table-5 Water Capacity in Gallons Per Minute for VB-7214 Series.

Valve Body	C _v	Differential Pressure (△P in psi)												
Part Number	Rating	1	2	3	4	5	6	7	8	9	10	15	20	35
VB-7214-0-4-1	0.4	0.40	0.57	0.69	0.80	0.89	0.98	1.06	1.13	1.20	1.26	1.55	1.79	2.37
VB-7214-0-4-2	1.3	1.30	1.84	2.3	2.6	2.9	3.2	3.4	3.7	3.9	4.1	5.0	5.8	7.7
VB-7214-0-4-3	2.2	2.2	3.1	3.8	4.4	4.9	5.4	5.8	6.2	6.6	7.0	8.5	9.8	13
VB-7214-0-4-4	4.4	4.4	6.2	7.6	8.8	9.8	11	12	12	13	14	17	20	26
VB-7214-0-4-5	5.5	5.5	7.8	9.5	11	12	13	15	16	17	17	21	25	33
VB-7214-0-4-6	7.5	7.5	11	13	15	17	18	20	21	23	24	29	34	44
VB-7214-0-4-7	10	10	14	17	20	22	24	26	28	30	32	39	45	59
VB-7214-0-4-8	14	14	20	24	28	31	34	37	40	42	44	54	63	83
VB-7214-0-4-9	20	20	28	35	40	45	49	53	57	60	63	77	89	118
VB-7214-0-4-10	28	28	40	48	56	63	69	74	79	84	89	108	125	166
VB-7214-0-4-11	40	40	57	69	80	89	98	106	113	120	126	155	179	237

C_v Equation

$$C_V = \frac{GPM}{\sqrt{\Delta P}}$$
 $\Delta P = \left(\frac{GPM}{C_V}\right)^2$ $GPM = C_V \sqrt{\Delta P}$

Where:

 C_v = Coefficient of flow

GPM = U.S. gallons per minute (60° F, 15.6° C) Δ P = Differential pressure in psi (pressure drop)

Two-position

Two-position zone valves and direct radiation valves are normally sized using a minimum of 10% of inlet pressure (psig).

Proportional

Proportional control valves are normally sized using:

- For low pressure (15 psig or less), use ΔP of 80% of gauge inlet pressure.
- For steam pressures greater than 15 psig, use ΔP of 42% of absolute (gauge plus 14.7 psig) inlet pressure.
- When the C_v required is between two valve sizes, select the larger size. Do not size steam valves using a pressure drop greater than 42% of the absolute inlet pressure.

Steam Capacity

See Table-6 for steam capacity of VB-7214 series valves.

Table-6 Steam Capacity in Pounds Per Hour for VB-7214 Series.

	_		Differential Pressure (△P in psi) ^a														
Valve Body Part Number	C _v Rating	2 psi	g Inlet	5 psig	j Inlet	10 psi	g Inlet	15 psig Inlet		20 psig Inlet		25 psig Inlet		30 psig Inlet		35 psig Inlet	
T di C (di ilia)	· · · · · · · · · · · ·	0.2	1.6	0.5	4	1	8	1.5	12	2	14	2.5	16	3	18	3.5	20
VB-7214-0-4-1	0.4	2.2	5.9	3.7	9.5	5.8	14	7.8	18	9.7	20	12	23	13	26	15	29
VB-7214-0-4-2	1.3	7.1	19	12	31	19	45	25	57	32	66	38	76	44	86	50	95
VB-7214-0-4-3	2.2	12	32	20	52	32	76	43	96	53	112	64	129	74	145	84	161
VB-7214-0-4-4	4.4	24	65	41	105	64	153	86	192	107	225	127	257	148	289	168	322
VB-7214-0-4-5	5.5	30	81	51	131	80	191	107	240	133	281	159	321	185	362	210	402
VB-7214-0-4-6	7.5	41	111	70	178	110	260	146	328	182	383	217	438	252	493	286	548
VB-7214-0-4-7	10	55	147	93	238	146	347	195	437	243	511	289	584	336	658	381	731
VB-7214-0-4-8	14	76	206	130	333	204	485	273	612	340	715	405	818	470	921	534	1024
VB-7214-0-4-9	20	109	295	186	475	292	694	390	874	485	1021	579	1168	671	1315	763	1462
VB-7214-0-4-10	28	153	413	260	665	409	972	546	1224	679	1429	811	1635	939	1841	1068	2047
VB-7214-0-4-11	40	218	590	372	951	584	1387	780	1749	970	2043	1157	2337	1342	2631	1526	2925

a Values are for saturated steam (K = 1).

Left column under each inlet pressure is for two-position control, and right column is for proportional control.

C_v Equation

$$C_{v} = \frac{QK}{3\sqrt{\Delta P \cdot P2}} \qquad \qquad Q = \frac{3C_{v}\sqrt{\Delta P \cdot P2}}{K}$$

Where:

C_v = Coefficient of flow

Q = Lbs. per hour of steam

 ΔP = Differential pressure in psi (pressure drop)

P2 = Outlet pressure in psia (absolute) (P2 = Inlet pressure + $14.7 - \Delta P$)

 $K = 1 + (0.0007 \text{ x} ^{\circ}\text{F superheat})$ (K = 1 for saturated steam)

Cavitation Limitations on Valve Pressure Drop

A valve selected with too high a pressure drop can cause erosion of discs and/or wire drawing of the seat. In addition, cavitation can cause noise, damage to the valve trim (and possibly the body), and choke the flow through the valve.

Do not exceed the maximum differential pressure (pressure drop) for the valve selected.

The following formula can be used on higher temperature water systems, where cavitation could be a problem, to estimate the maximum allowable pressure drop across the valve:

$$Pm = 0.5 (P_1 - Pv)$$

Where:

Pm = Maximum allowable pressure drop (psi)

P₁ = Absolute inlet pressure (psia)

Pv = Absolute vapor pressure (psia) (refer to Table-6 or Table-7)

Note: Add 14.7 psi to gauge supply pressure to obtain absolute pressure value.

For example, if a valve is controlling 200°F water at an inlet pressure of 18 psig, the maximum pressure drop allowable would be:

Pm = 0.5 [(18 + 14.7) - 11.53] = 10.6 psi(Vapor pressure of 200°F water is 11.53 psia.)

If the pressure drop for this valve is less than 10.6 psi, cavitation should not be a problem.

Systems where cavitation is shown to be a problem can sometimes be redesigned to provide lower inlet velocities. Valves having harder seat materials should be furnished if inlet velocities cannot be lowered.

Table-7 Vapor Pressure of Water Table.

Water Temp. (°F)	Vapor Pressure (psia)	Water Temp. (°F)	Vapor Pressure (psia)	Water Temp. (°F)	Vapor Pressure (psia)	Water Temp. (°F)	Vapor Pressure (psia)
40	0.12	90	0.70	140	2.89	190	9.34
50	0.18	100	0.95	150	3.72	200	11.53
60	0.26	110	1.28	160	4.74	210	14.12
70	0.36	120	1.69	170	5.99	220	17.19
80	0.51	130	2.22	180	7.51	230	20.78

Additional Valve Sizing Information

For additional valve sizing information, see:

- CA-28 Control Valve Sizing, F-13755
- Valve Selection Chart Water, F-11080
- Valve Selection Chart Steam, F-11366
- Valve Sizing Slide Rule, TOOL-150

INSTALLATION

Inspection

Inspect the package for damage. If damaged, notify the appropriate carrier immediately. If undamaged, open the package and inspect the device for obvious damage. Return damaged products.

Requirements

- Tools (not provided): Pipe wrenches
- Training: Installer must be a qualified, experienced technician
- Appropriate accessories

Caution:

- Install the valve with the flow in the direction of the flow arrow ("A" port is the inlet and "AB" port is the outlet).
- Do not exceed the ratings of the device.
- Avoid locations where excessive moisture, corrosive fumes, or vibration are present.

Mounting

- The valve should be mounted in a weather-protected area in a location that is within the ambient limits of the actuator. When selecting a location, allow sufficient room for valve linkage, actuator, and other accessories and for service of the product.
- 2. The preferred mounting position for the valve is with the valve stem vertical above the valve body. Avoid mounting the valve so that the valve stem is below horizontal.
- 3. On steam applications where the ambient temperature approaches the limit of the actuator, the valve stem should be mounted 45° from vertical.
- 4. The valves must be piped with the "A" port as the inlet and the "AB" port as the outlet.

Union Sweat Valve Bodies

Remove both tail pieces and union nuts from the valve body. Apply flux to the tail pieces
and pipe before sweating into place. Make sure the union nuts are mounted on the tail
pieces before sweating.

Caution: Do not sweat the tail pieces in place while they are mounted to the valve body. The excess heat will damage the valve body.

- Re-install the valve body. Start the joint by hand screwing the union nut onto the valve body. If the thread engagement feels "right," turn each union nut by hand as far as it will go.
- Using a pipe wrench to hold the valve, fully tighten the union nut to the valve. Do not over tighten or strip the threads. Take care not to apply torsion across the valve body.

CHECKOUT

- Make sure the valve stem operates smoothly before installing the valve linkage and the actuator.
- If the stem does not operate smoothly, it may indicate that the valve was twisted or crushed during installation or that the stem was bent by rough handling. These conditions may require that the valve be replaced.
- 3. After the piping is under pressure, check the valve body and the connections for leaks.
- 4. After the valve linkage and the actuator are installed, check their operation.
 - Power the actuator and run the valve to the stem down position. Make sure the linkage and valve stem move freely. At the stem down position, the valve should shut off tightly.
 - b. For spring return actuators, allow the actuator to spring return to the stem up position. Again, the valve stem and linkage should operate smoothly. At the stem up position, the valve should be in its full open position.

MAINTENANCE & FIELD REPAIR

Regular maintenance of the total system is recommended to assure sustained performance. See Table-8 for maintenance kit part numbers.

Table-8 Maintenance Kits for VB-7214 Valves

Valve Body Part Number	Replacement Packing Assembly	Packing Wrench	Valve Repair Kit ^a	Tail Piece	Union Nut	
VB-7214-0-4-1			RYB-721-1			
VB-7214-0-4-2			RYB-721-2	YBA-657-4	YBA-656-4	
VB-7214-0-4-3			RYB-721-3	1 DA-007-4	1 DA-030-4	
VB-7214-0-4-4	1	TOOL-20-1	RYB-721-4			
VB-7214-0-4-5			RYB-721-5	YBA-657-6	YBA-656-6	
VB-7214-0-4-6	YBA-622-1		RYB-721-6	1 DA-037-0	1 DA-030-0	
VB-7214-0-4-7			RYB-721-7	YBA-657-8	YBA-656-8	
VB-7214-0-4-8			RYB-721-8	1 DA-037-0	1 DA-000-0	
VB-7214-0-4-9			RYB-721-9	YBA-657-9	YBA-656-9	
VB-7214-0-4-10			RYB-721-10	YBA-657-10	YBA-656-10	
VB-7214-0-4-11			RYB-721-11	YBA-657-11	YBA-656-11	

^a Kit includes replacement packing and stem & plug assembly.

Water System Maintenance

All heating and cooling systems are susceptible to valve and system problems caused by improper water treatment and system storage procedures. These guidelines are provided to help avoid valve and water system problems resulting from improperly treated water or storage procedures in cooling and hot water systems, and to obtain maximum life from Scheider Electric valves.

Durability of valve stems and packings is dependent on maintaining non-damaging water conditions. Inadequate water treatment or filtration, not in accordance with chemical supplier/ASHRAE handbook recommendations, can result in corrosion, scale, and abrasive particle formation. Scale and particulates can result in stem and packing scratches and can adversely affect packing life and other parts of the hydronic system.

To maintain non-damaging conditions, follow these guidelines:

- Clean the system prior to start up. Use a nitrite or molybdate-based treatment program.
- Use filtration equipment where needed.
- Properly store off-line systems and monitor water treatment results using corrosion test coupons.
- Follow the advice of a water treatment professional.
- Consult EN-205, Water System Guidelines Engineering Information, F-26080, for further details.

DIMENSIONAL DATA

Table-9 Dimensions for VB-7214 Series Valve (Figure-3).

Dout	Value	Dimensions in Inches (mm)									
Part Number	Valve Size	Α	В	С	D (Stem Down)	E ^a (Stroke)					
VB-7214-0-4-1 VB-7214-0-4-2 VB-7214-0-4-3 VB-7214-0-4-4	1/2"	4-3/16 (106)	1-1/16 (27)	1-11/16 (43)		7/16 (11)					
VB-7214-0-4-5 VB-7214-0-4-6	3/4"	5-7/16 (138)			3/4 (19)						
VB-7214-0-4-7 VB-7214-0-4-8	1"	6-5/8 (168)	1-1/8 (29)	2-3/8 (60)	G/4 (13)	7710 (11)					
VB-7214-0-4-9	1-1/4"	6-13/16 (173)	1-3/8 (35)								
VB-7214-0-4-10	1-1/2"	8-5/16 (211)	1-1/2 (38)	2-7/16 (57)							
VB-7214-0-4-11	2"	9-3/16 (233)	1-9/16 (40)	2-3/4 (70)							

^a Stroke for rated flow. Add up to 1/16 in. (1.6 mm) for disc seating and compression.

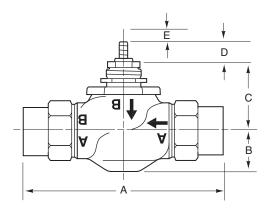


Figure-3 Typical of VB-7214-0-4-P Valve Bodies.

On October 1st, 2009, TAC became the Buildings business of its parent company Schneider Electric. This document reflects the visual identity of Schneider Electric, however there remains references to TAC as a corporate brand in the body copy. As each document is updated, the body copy will be changed to reflect appropriate corporate brand changes.

Copyright 2010, Schneider Electric All brand names, trademarks and registered trademarks are the property of their respective owners. Information contained within this document is subject to change without notice. Schneider Electric 1354 Clifford Avenue P.O. Box 2940 Loves Park, IL 61132-2940

www.schneider-electric.com/buildings

